cell may explode.

3. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
5. Do not attempt to recharge the batteries identified for use with this product. The batteries may leak corrosive electrolyte or explode.
6. Do not attempt to rejuvenate the batteries identified for use with this product by heating them. Sudden release of the battery electrolyte may occur causing burns or irritation to the eyes.
7. When replacing batteries, all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged batteries.
8. When inserting batteries into this product, the proper polarity or direction must be observed. Reverse insertion of batteries can cause charging, and that may result in leakage or explosion.
9. Remove the batteries from this product if the product will not be used for a long period of time; batteries could leak in the product.
10. Discard "dead" batteries as soon as possible since "dead" batteries are more likely to leak into a product.
11. Do not store this product, or the batteries identified for use with this product, in high temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation. Batteries should be stabilized at room temperature prior to use after cold storage.

Save These Instructions

This package contains:

- FM112 Caller Identifier
- Owner's Manual
- Warranty Card (part of Owner's Manual)

IMPORTANT NOTICE

- To use this system, you must be in an area where Caller ID service is available and you must subscribe to the service.
- The Caller ID System displays the caller's name only if this feature is available in your area.
- The Caller ID System requires three AA batteries (not included).

LOCATION OF CONTROLS

TOP VIEW:

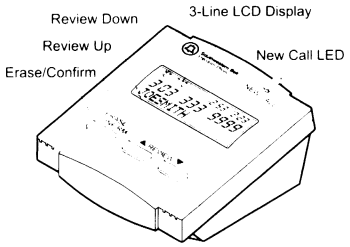

INSTALLATION

CAUTION

1. **Never install telephone wiring during a lightning storm**
2. **Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.**
3. **Never touch uninsulated telephone wires or terminals unless the incoming telephone line has been disconnected at the network interface.**
4. **Use caution when installing or modifying telephone lines.**

NOTE: Refer to "FCC Wants You to Know" section before connection to the telephone line.

CALLER ID OPERATION

Receiving Calls

After the first ring, the NEW CALL icon and call information will appear on the display, and the NEW CALL LED will flash. The NEW CALL icon and the NEW CALL LED will continue flashing until you review ALL your new calls.

Reviewing New Call Records

1. When Time/Date screen is displayed, press REVIEW ▲ or REVIEW ▼, and the display will show the last new call information.
2. Continue pressing REVIEW ▲ or REVIEW ▼, to review all new call information in the order the calls were received.
3. After the final call has been reviewed, the display will show "END OF NEW CALL", and the NEW CALL LED will stop flashing,

Review Call Records Stored in Memory

1. Press REVIEW ▲ or REVIEW ▼, and the display will show the calls stored in memory.
2. Continue to press REVIEW ▲▼, to display all call records, in the order they were received, from the oldest to the newest.
3. Continue reviewing all calls until – END – is displayed.

CALLER ID FEATURES

NEW CALL: Appears the first time you review a call's information.

PRIVATE CALL: Appears if caller has blocked their call information from being sent to you.

OUT OF AREA: Appears if the caller is not within Caller ID service area.

--ERROR-- Appears if the Caller ID information is garbled. It is normal for this to occasionally happen. If this happens often, contact your local phone service provider and ask them to correct the problem.

ERASING CALLS

Erasing a Single Call Information

1. Press REVIEW ▲ or REVIEW ▼ until the call record you want to erase is displayed.
2. Press ERASE and "ERASE?" will be displayed. Press ERASE again to remove the call information displayed.
3. The display will then show the previous call.

Erasing All Calls

1. With the Time/Day screen displayed, press and hold ERASE.
2. "ERASE ALL?" will be displayed.
3. Press ERASE button; **ALL CALL INFORMATION WILL BE ERASED.** "NO CALLS" will be displayed, followed by the Time/Day screen.

IMPORTANT: You must first retrieve all new calls, or else Erase All will not work.

LOW BATTERY INDICATION

When the batteries are low, the battery icon will flash. Be sure to review all your calls before changing the batteries since stored information may be lost when replacing batteries. Batteries should be changed as soon as possible to maintain reliable operation. Also, old or weak batteries can leak chemicals that can damage electronic circuits.

IMPORTANT : The unit should be idle for approximately 2 minutes before installing new batteries. Every time batteries are replaced, you need to program the language.

or to an Authorized Service Center must be accompanied by a copy of the purchase receipt. In the absence of such purchase receipt, the warranty period shall be one (1) year from the date of manufacture. To obtain service under this warranty, return the defective product to the Service Center nearest you together with your sales slip and $9.50 for postage and handling. California residents need only provide proof of purchase.

This warranty shall be invalid if the product is damaged as result of defacement, misuse, abuse, neglect, accident, destruction, or alteration of the serial number, improper electrical voltages or currents, repair, alterations or maintenance by any person or party other than our own service facility or an authorized service center, or any use violative of instructions furnished by us. This warranty is also invalid if this product is removed from the country in which it was purchased, if it is used in a country in which it is not registered for use, and/or if it is used in a country for which it was not designed. Due to variations in telephone systems and communications laws, this product may be illegal for use in some countries.

Southwestern Bell Freedom Phone® Retail Sales assumes no responsibility for damages or penalties incurred resulting from the use of this product in a manner or location other than that for which it is intended. This one year limited warranty is in lieu of all other expressed warranties, obligations, or liabilities. ANY IMPLIED WARRANTIES, OBLIGA-

TIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE ONE-YEAR DURATION OF THIS WRITTEN LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL WE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER.

Some states do not allow the exclusion or limitation of special, incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING YOUR TELEPHONE EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basememt, or near a swimming pool.
5. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to it.
6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect from overheating. These openings should never be blocked or covered by placing the product on a bed, or similar surface. This product should never be placed near or over a radiator or heat register.

7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not place this product where the cord will be abused by persons stepping on it.
9. Do not overload wall outlets and extensions cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.
11. To reduce the risk or electric shock, do not disassemble this product, but take it to a qualified serviceman when some service or repair work is required. Opening or removing covers may expose you to dangerous voltage or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
    a. When the power supply cord or plug is damaged or frayed.
    b. If liquid has been spilled into the product.

    c. If the product has been exposed to rain or water.
    d. If the product does not operate normally by following operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment or other controls may result in damage and will often require extensive work by qualified technician to restore the product to normal operation.
    e. If the product has been dropped or cabinet has been damaged
    f. If the product exhibits a distinct change in performance.
13. Avoid using the telephone (other than a cordless type) during an electrical storm. There may be remote risk of electric shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity or the leak.

SAFETY INSTRUCTIONS FOR BATTERIES

(CAUTION)
TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS, READ AND FOLLOW THESE INSTRUCTIONS:

1. Use only the size and type of batteries mentioned in the Owner's Manual.
2. Do not dispose of the batteries in a fire. The

Installing Batteries/Set Language

1. Disconnect the unit from the telephone line.
2. Use a pen or paper clip to loosen the battery cover. Open the battery compartment by pressing down on the battery cover and sliding it away from the unit.

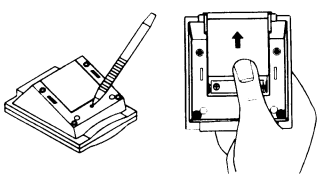

3. **INSERT THREE (3) AA ALKALINE BATTERIES** into the battery compartment and be careful not to press any of the function keys while inserting the batteries. Be sure to observe proper battery polarity (+ and -).
4. Replace the battery cover. All characters of the display will illuminate briefly.
5. The display will then show FM112B2 Rev.2.X where 2.X equals the current software revision.
6. Next, the display will show SET LANGUAGE ▲ ▼.
7. Press the Review ▲ or Review ▼ to select ENGLISH, FRENCH or SPANISH.
8. Press the ERASE key to confirm the selection.

9. The display will show CONTRAST ▲ ▼.
10. Press Review ▲ to make the contrast darker or Review ▼ to make the contrast lighter. Press ERASE to confirm the contrast.
11. The display will show the default Time/ Date (12:00am 1/01). The time and date will automatically be updated as incoming Caller ID calls are received.

NOTE:
• If you try to use the telephone before finishing the Caller ID set up, or if you pause more than 40 seconds during any of the above steps, the display will show "SET LANGUAGE ▲ ▼" to remind you to finish the sequence.
• When the battery indicator is displayed, disconnect all connections to you FM112 and replace the batteries.

Connection To The Phone Line

1. Unplug the telephone line cord of your telephone from the modular wall jack and plug it into the PHONE jack on your FM112.
2. Plug the fixed line cord of the FM112 into the modular wall jack.

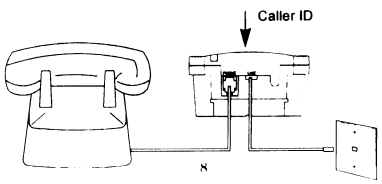

Connection To Telephone Answering Machine

1. Unplug the telephone line cord of your telephone from the modular wall jack, and plug it into the phone jack of your telephone answering system.
2. Plug one end of the telephone line cord into the LINE jack on your telephone answering machine.
3. Plug the other end of this line cord into the phone jack of the FM112.
4. You must set the answering machine to answer after four rings in order to receive the Caller ID information.

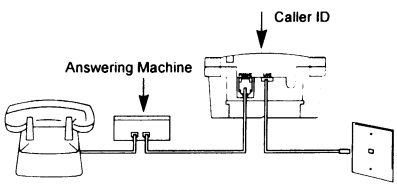

Adjusting The Display Contrast

To adjust the LCD display contrast, press and hold REVIEW ▲ and ▼ buttons at the same time for 2 seconds. Display will show " Contrast ▲▼" Press REVIEW ▲ to make the contrast darker or REVIEW ▼ to make the contrast lighter. Press ERASE to confirm the contrast.

SERVICE

According to FCC regulations, this equipment, which has been certified and registered by the FCC, may only be repaired by authorized persons. If repairs or adjustments are made by an unauthorized person, the FCC certification may be voided. Should you encounter any problems, please call the Southwestern Bell Freedom Phone® toll free Customer help Line for assistance: 1-800-366-0937, Monday - Friday 8:30 am - 9:00 pm, and Saturday 8:30 am - 12:30 pm. You can also visit our website at http://www.swbfreedomphone.com.

For In Warranty Replacement:

Package your complete unit (including all accessories) and ship the unit postage prepaid* and insured (for your protection) to:
SOUTHWESTERN BELL FREEDOM PHONE®
DEPT: In Warranty
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

Be sure to include your return address, proof of purchase, a daytime phone number, $9.50 for postage and handling*, and a brief explanation of your difficulties.

NOTE:
*California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions.

For Out of Warranty Service:

You may call our toll free Help Line at 1-800-366-0937 for an estimated service charge before returning your unit. Please follow all instructions for In-Warranty service to return your unit, and mark the package: DEPT.: Out of Warranty

FCC WANTS YOU TO KNOW

This equipment complies with Part 68 of the FCC rules. On the bottom of the base of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. You must, upon request, provide this information to your telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

If your telephone equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If

possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone equipment, disconnect from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

LIMITED WARRANTY

The obligation of Southwestern Bell Freedom Phone® Retail Sales under this warranty shall be limited to repair or replacement (at our option), during the warranty period of any part which proves defective in material or workmanship under normal installation use and service, provided the product is returned to Southwestern Bell Freedom Phone® Retail Sales or to one of our Authorized Service Centers with TRANSPORTATION CHARGES PREPAID. Products returned to us

INSTRUCCIONES DE SEGURIDAD PARA LAS PILAS

(PRECAUCIÓN)
PARA REDUCIR EL RIESGO DE INCENDIO O DAÑOS A PERSONAS, LEA Y SIGA LAS SIGUIENTES INSTRUCCIONES:

1. Use solamente el tamaño y el tipo de pilas indicadas en el Manual del Usuario.
2. No tire las pilas al fuego. Las celdas pueden explotar.
3. No intente abrir o mutilar las pilas. Un derrame del electrólito es corrosivo y puede causar daños a los ojos o la piel. Pudiera ser tóxico si es ingerido.
4. Tenga mucho cuidado al manejar las pilas para no hacer corto con materiales conductores tales como anillos, brazaletes, y llaves. Las pilas o los conductores pueden sobrecalentarse y causar quemaduras.
5. No trate de recargar las pilas que se indican para ser usadas con este aparato. Las pilas pueden derramar electrólito corrosivo o pueden explotar.
6. No trate de reactivar con calor las pilas que se indican para ser usadas con este aparato. Puede ocurrir un derrame repentino del electrólito de la pila causando quemaduras o irritaciones a los ojos o la piel.
7. Al cambiar las pilas, todas las pilas deben de ser cambiadas al mismo tiempo. El tener pilas nuevas junto con pilas descargadas, puede aumentar la presión interna de las celdas y producirse una ruptura en las pilas descargadas.

8. Al colocar las pilas a este aparato, debe de observarse la polaridad o dirección correcta de las pilas. El colocar una pila en dirección opuesta puede provocar que se descargue, y esto pudie causar un derrame o una explosión.
9. Quite las pilas del aparato si el aparato no va a ser usado por una larga temporada (varios meses o más) puesto que durante este período, la pila pudiera derramarse adentro del aparato.
10. Quite las pilas "usadas" tan pronto como sea posible puesto que hay más posibilidad de que las pilas "usadas" se derramen adentro del aparato.
11. No guarde este aparato, o las pilas que se indican para ser usadas con el aparato, en lugares de temperaturas extremosas. Las pilas almacenadas en un congelador o refrigerador con el propósito de extender la vida de Èstas, deben de protegerse de la condensación durante el almacenamiento y la descongelación. Antes de ser usadas, las pilas deben de estabilizarse a temperatura ambiente después de sacarlas del almacenamiento frío.

Guarde Estas Instrucciones

(Este paquete contiene):

- El Identificador de Llamadas Modelo FM112
- Un Manual del Usuario
- Una Tarjeta de Garantía (parte del Manual del Usuario)

AVISO IMPORTANTE

- Para usar este sistema, usted debe de estar en una área en donde está disponible el servicio de Identificación de Llamadas y debe de suscribirse a dicho servicio.
- El Sistema de Identificación de Llamadas muestra el nombre de la persona que llama solamente si esta característica está disponible en su área.
- El Sistema de Identificación de Llamadas requiere de tres pilas tipo AA (no incluidas).

UBICACIÓN DE LOS CONTROLES

VISTA SUPERIOR:

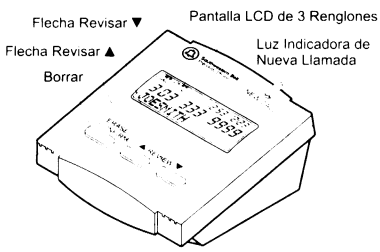

Conexión a una Máquina Contestadora de Teléfono

1. Desconecte el cable telefónico de su teléfono del enchufe modular, y conéctelo al enchufe telefónico de su máquina contestadora.
2. Conecte un extremo del cable telefónico al enchufe de Línea (LINE) en su máquina contestadora.
3. Conecte el otro extremo de este cable al enchufe telefónico del FM112.
4. Debe de programar su máquina contestadora para contestar después de cuatro timbrazos para poder recibir la información del Identificador de Llamadas.

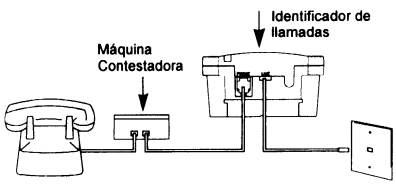

Ajustando el Contraste de la Pantalla

Para ajustar el contraste de la pantalla, oprima y mantenga oprimidas las teclas Revisar ▲ (REVIEW▲) y Revisar ▼(REVIEW ▼) al mismo tiempo durante 2 segundos. La pantalla mostrará "Contrast ▲▼". Oprima Revisar ▲ (REVIEW ▲) para obscurecer el contraste de la pantalla o Revisar ▼ (REVIEW ▼) para aclarar el contraste de la pantalla. Oprima la tecla Borrar (ERASE) para confirmar el contraste.

OPERACIÓN DEL IDENTIFICADOR DE LLAMADAS

Recibiendo Llamadas

Después del primer timbrazo, aparecerá en la pantalla el icono de Nueva Llamada (NEW CALL) así como la información de la llamada, y comenzará a parpadear la luz indicadora de Nueva Llamada (NEW CALL). El icono y la luz indicadora de Nueva Llamada (NEW CALL) continuarán parpadeando hasta que usted revise TODAS las nuevas llamadas recibidas.

Revisando los Registros de Nuevas Llamadas

1. Cuando aparezca la pantalla de Hora/Fecha, oprima Revisar ▲ (REVIEW ▲) o Revisar ▼ (REVIEW ▼) y aparecerá la información de la última llamada nueva recibida.
2. Continúe oprimiendo Revisar ▲ (REVIEW ▲) o Revisar ▼ (REVIEW ▼) para revisar toda la información de nuevas llamadas en el orden en que éstas fueron recibidas.
3. Después de revisar la última llamada, aparecerá en la pantalla Fin de Nueva Llamada (END OF NEW CALL) y se apagará la luz indicadora de Nueva Llamada (NEW CALL).

Para Revisar los Registros de Llamadas NUEVAS Guardadas en la Memoria

1. Oprima Revisar ▲▼ (REVIEW ▲▼) y la pantalla mostrará las llamadas guardadas en la memoria.
2. Continúe oprimiendo Revisar ▲▼ (REVIEW ▲▼) para mostrar todos los registros de las llamadas, en el orden en que fueron recibidas, desde la llamada más antigua hasta la más reciente.
3. Continúe revisando todas las llamadas hasta que aparezca - Final - (END) en la pantalla.

CARACTERÍSTICAS DEL IDENTIFICADOR DE LLAMADAS

Nueva Llamada (NEW CALL): Aparece la primera vez que usted revise la información de una llamada.

Llamada Privada (PRIVATE CALL): Aparece

teléfono 1-800-366-0937, para solicitar el precio estimado del servicio antes de regresar su unidad. Por favor siga todas las instrucciones arriba mencionadas respecto a Servicios Bajo la Garantía para regresar su aparato, y indique en su paquete: DEPT.: Out of Warranty.

LA FCC QUIERE INFORMARLE

Este equipo cumple con la Sección 68 de las reglas de la Comisión Federal de Comunicaciones (FCC). En la parte inferior de la base de este aparato hay una etiqueta que contiene, entre otra información, el Número de Registro de la FCC y el Número de Equivalencia del Timbre (REN) de este aparato. Usted debe de, al ser requerido, proporcionar esta información a su compañía local de teléfonos.

El número REN es usado para determinar el número de aparatos que usted puede conectar a su línea telefónica para que estos aparatos suenen al recibir una llamada. En la mayoría, pero no en todas las áreas, la suma de todos los números REN no deber de ser superior a cinco (5.0). Para estar seguro del número de aparatos que usted puede conectar a su línea, como lo establece el número REN, debe de ponerse en contacto con su compañía local de teléfonos para determinar el máximo número de REN para su área telefónica en particular.

Si su equipo causa daños a la red telefónica, la compañía de teléfonos podrá discontinuar su servicio temporalmente, y le notificará por anticipado cuando sea posible. Sin embargo, si no es posible notificarle por anticipado, será notificado tan pronto como sea posible. Se le informará sobre

sus derechos a presentar una reclamación ante la FCC.

Su compañía de teléfonos podrá efectuar cambios en sus instalaciones, equipo, operaciones o procedimientos que pudieran afectar el correcto funcionamiento de su equipo telefónico. Si lo hacen, la compañía de teléfonos le notificará por anticipado para darle la oportunidad de mantener el servicio telefónico sin interrupciones. Si tiene problemas con este aparato telefónico, la compañía de teléfonos le podrá solicitar que desconecte este aparato de la red hasta que el problema sea corregido o hasta que usted esté seguro de que el aparato funcione bien.

El equipo no puede ser usado con servicio de monedas proporcionado por la compañía de teléfonos. La conexión a un servicio compartido (party line) está sujeta a tarifas estatales.

GARANTÍA LIMITADA

La obligación que tiene el Departamento de Ventas al Menudeo de **Southwestern Bell Freedom Phone®** bajo esta garantía estará limitada a la reparación o el reemplazo (a nuestra opción) durante el período de la garantía de cualquier parte que resulte defectuosa en su fabricación o en los materiales bajo condiciones normales de instalación, uso y servicio, siempre que el producto sea devuelto CON PORTE PAGADO al Departamento de Ventas al Menudeo de **Southwestern Bell Freedom Phone®** o a uno de nuestros Centros de Servicio Autorizado. Todo

aparato devuelto a nosotros o a un Centro de Servicio Autorizado debe venir acompañado por una copia del recibo de compra. A falta de dicho recibo de compra, el período de garantía será de un (1) año después de la fecha de fabricación. Para obtener servicio bajo esta garantía, devuelva el aparato defectuoso al centro de servicio más cercano junto con su recibo de compra y US$9.50 para gastos de manejo y envío. Los residentes de California sólo necesitan proporcionar prueba de compra.

Esta garantía es inválida si el aparato es dañado como resultado de deterioro, maltrato, abuso, negligencia, accidente, destrucción o alteración del número de serie, el uso incorrecto de voltajes o corrientes eléctricas, reparaciones, alteraciones o mantenimiento incorrecto por cualquier persona o parte diferente a nuestra instalación de servicio o Centro de Servicio Autorizado, o debido a cualquier uso en violación a las instrucciones proporcionados por nosotros. Esta garantía también es inválida si el aparato es sacado del país en donde fue comprado, si es usado en un país en donde su uso no es registrado, y/o si es usado en un país para el cual no fue diseñado su uso. Debido a las variaciones en los sistemas telefónicos y en las leyes que rigen las comunicaciones, el uso de este aparato podrá ser ilegal en algunos países.

El Departamento de Ventas al Menudeo de **Southwestern Bell Freedom Phone®** no asume responsabilidad por daños o multas incurridos resultantes del uso de este aparato de tal manera o

INSTALACIÓN

PRECAUCIÓN

1. Nunca instale cable telefónico durante una tormenta eléctrica.
2. Nunca instale enchufes telefónicos en lugares mojados a menos de que el enchufe esté diseñado específicamente para dichos lugares.
3. Nunca toque cable telefónico sin aislamiento o las terminales a menos de que la línea telefónica haya sido desconectada en la red de interconexiones.
4. Tenga cuidado al instalar o modificar cualquier línea telefónica.

NOTA: Sírvase consultar la sección de

"Requerimientos de la FCC" antes de efectuar cualquier conexión a una línea telefónica.

Instalando las Pilas/Programando el Idioma de Operación

1. Desconecte la unidad de la línea telefónica.
2. Use una pluma, clip para papel u objeto puntiagudo para aflojar la cubierta de la pila. Abra el compartimiento de las pilas oprimiendo sobre la cubierta de las pilas y deslizándola lejos de la unidad.

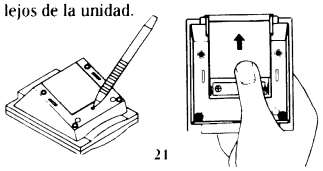

3. **COLOQUE TRES (3) PILAS ALCALINAS AA** en el compartimiento de las pilas teniendo cuidado de no oprimir ninguna de las teclas de funciones mientras instala las pilas. Asegúrese de observar la correcta polaridad de las pilas (+ y -).
4. Coloque nuevamente la cubierta de las pilas y ponga el tornillo de seguridad. Todos los caracteres de la pantalla se encenderán por unos cuantos segundos.
5. La pantalla mostrará FM112B2 Rev 3.X en donde 3.X se refiere a la versión actual del software.
6. En seguida, la pantalla mostrará Programar Idioma (SET LANGUAGE ▲ ▼).
7. Para seleccional el idioma, oprima Revisar ▲ (Review ▲) or Revisar ▼ (Review ▼) para seleccionar inglés, francés o espanõl.
8. Oprima la tecla Borrar (ERASE) para confirmar la selección.
9. Aparecerá en la pantalla Contrast (CONTRAST ▲ ▼) (símbolo de flecha arriba/abajo).
10. Oprima Revisar (Review ▲) (símbolo de flecha arriba) para obscurecer el contraste o Revisar (Review ▼) (símbolo de flecha abajo) para aclarar el contraste. Oprima Borrar (ERASE) para confirmar su selección de contraste.
11. Aparecerá en la pantalla la Hora/Fecha (Time/Date) preprogramada (12:00am 1/01). La hora y la fecha automáticamente serán actualizadas cuando el Identificador de Llamadas reciba llamadas.

NOTA:

- Si intenta usar el teléfono antes de terminar de programar el Identificador de Llamadas, o si hay una pausa de más de 40 segundos durante cualquiera de los pasos mencionados arriba. aparecerá en la pantalla Programar Idioma (SET LANUGAGE ▲ ▼) (símbolo de flecha arriba/abajo) para recordarle que necesita terminar la secuencia.
- Cuando aparece el indicador de pila, desconecte todas las conexiones de su FM112 y reempalce las pilas.

Conexión a la Línea Telefónica

1. Desconecte el cable telefónico de su teléfono del enchufe modular de la pared y conéctelo al enchufe denominado Teléfono (PHONE) en su FM112.
2. Conecte el cable telefónico incorporado del FM112 al enchufe modular de la pared.

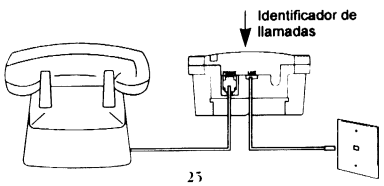

i la persona que llama ha bloqueada la infornación de sus llamadas y ésta no es enviada a isted.

Fuera del Área (OUT OF AREA): Aparece si la persona que llama no se encuentra dentro del rea de servicio del Identificador de Llamadas.

-ERROR--Aparece si la información es ininteigible para el Identificador de Llamadas. Es ormal que esto ocurra ocasionalmente. Si esto ucede frecuentemente, póngase en contacto on su compañía local de teléfonos y solicíteles ue solucionen el problema.

BORRANDO LLAMADAS

Borrando el Registro de una Llamada en Particular

1. Oprima Revisar ▲ (REVIEW ▲) o Revisar ▼ (REVIEW ▼) hasta localizar el registro de llamada que desea borrar.
2. Oprima la tecla Borrar (ERASE) y aparecerá Borrar ? (ERASE ?). Oprima la tecla Borrar (ERASE) nuevamente para borrar la información de la llamada que aparece en la pantalla.
3. Aparecerá la siguiente llamada en la pantalla.

Borrando Todas las Llamadas

1. Al aparecer la pantalla de Hora/Día, oprima y mantenga oprimida la tecla Borrar (ERASE).
2. Aparecerá Borrar Todo? (ERASE ALL?).
3. Oprima la tecla Borrar (ERASE); **TODA LA INFORMACIÓN DE LLAMADAS SERÁ**

BORRADA. Aparecerá en la pantalla NO HAY LLAMADAS (NO CALLS), luego aparecerá la pantalla de Hora/Fecha.

IMPORTANTE: Usted necesita revisar primero todas las llamadas nuevas o no funcionará la función Borrar Todo (ERASE ALL).

INDICADOR DE PILA BAJA

Cuando las pilas están bajas, parpadeará el icono de pilas. Asegúrese de revisar todas las llamadas antes de cambiar las pilas puesto que se podrá perder información guardada en la memoria al reemplazar las pilas. Las pilas deberán de reemplazarse tan pronto como sea posible para mantener una operación confiable. Asimismo, las pilas antiguas o débiles pueden derramar substancias químicas que pueden dañar a los circuitos electrónicos.

IMPORTANTE: Antes de instalar nuevas pilas, deje la unidad en reposo durante aproximadamente 2 minutos. Cada vez que instale pilas, necesita volver a programar el idioma.

Servicio

Según los reglamentos de la FCC, este equipo, el cual ha sido certificado y registrado por la FCC, sólo puede ser reparado por personal técnico autorizado. Si personal no autorizado efectúa reparaciones o ajustes al equipo, podrá anular la certificación de la FCC. Si usted tiene problemas con este equipo, sírvase llamar a la Línea

Directa del Consumidor de **Southwestern Bell Freedom Phone®** al número telefónico sin cargo en los Estados Unidos:

1-800-366-0937 de lunes a viernes entre las 8:30 am y las 9:00 pm y sábados de 8:30 am - 12:30 pm Tiempo Estándar del Este (EST), o visite nuestro sitio
Web en: http://www.swbfreedomphone.com.

Para Reemplazos Bajo la Garantía:

Empaque bien todo el aparato (incluyendo adaptadores, cables, y otros accesorios) y envíe todo con porte pagado* y asegurado (para su protección) a:
SOUTHWESTERN BELL FREEDOM PHONE®
DEPT: In Warranty
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

Favor de incluir su dirección, recibo de compra, un teléfono donde lo podemos localizar durante el día, y US$9.50 para gastos de manejo y envío* junto con una breve explicación de los problemas que ha encontrado.

NOTA:
***Los residentes de California sólo necesitan proporcionar una prueba de compra y deben de llamar al 1-800-366-0937 para obtener instrucciones de envío.**

Para Reemplazos No Cubiertos Bajo la Garantía:
Usted puede llamar a nuestra Línea Directa del Consumidor sin cargo en los Estados Unidos al

en tal lugar diferentes a su propósito. Esta garantía limitada de un año se establece en lugar de cualquier otra garantía, obligación o responsabilidad. CUALQUIER OTRA GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITA, INCLUYENDO Y SIN ESTAR LIMITADA A LAS GARANTÍAS IMPLÍCITAS DE CALIDAD Y ADECUACIÓN PARA UN USO EN PARTICULAR, ESTARÁ LIMITADA A LA DURACIÓN DE UN AÑO DE ESTA GARANTÍA LIMITADA ESCRITA.

Debido a que algunos estados no permiten limitaciones en cuanto al período de duración de una garantía implícita, las limitaciones arriba descritas podrán no ser aplicables a su caso.

BAJO NINGUNA CIRCUNSTANCIA PODREMOS SER RESPONSABLES POR CUALQUIER DAÑO ESPECIAL, INCIDENTAL O CONSIGUIENTE DEBIDO A LA VIOLACIÓN DE ...ÉSTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA, CUALESQUIERA QUE SEA.

Debido a que algunos estados no permiten la exclusión o la limitación de daños especiales, incidentales o consiguientes, podrán no ser aplicables a su caso las limitaciones o exclusiones arriba descritas. Esta garantía le ofrece derechos legales específicos, y podrá tener otros derechos los cuales varían de un estado a otro.

STOP - DON'T TAKE ME BACK TO THE STORE.
LOOK - FOR THE TOLL-FREE "HELP" TELEPHONE NUMBER.
LISTEN - AS THE EXPERTS TALK YOU THROUGH THE PROBLEM.

For immediate answers to your questions regarding operation, missing parts or installation, call:

Southwestern Bell Freedom Phone®
Retail Sales Help Line at
1-800-366-0937
Monday - Friday 8:30 a.m. - 9:00 p.m. EST
Saturday 8:30 a.m. - 12:30 p.m. EST
http: // www. swbfreedomphone. com

SOUTHWESTERN BELL FREEDOM PHONE®
7475 N. GLEN HARBOR BLVD., GLENDALE, AZ 85307

FM112 96SB2044 Printed in China IB-2959L

Southwestern Bell
Freedom Phone®

50 Memory Name and Number Caller ID*

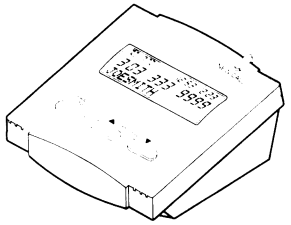

***IMPORTANT:**
IN ORDER FOR INCOMING CALL IDENTIFIER INFORMATION TO BE PROVIDED ON YOUR CALLER IDENTIFIER. YOU MUST SUBSCRIBE TO CALLER ID SERVICE FROM YOUR LOCAL TELEPHONE COMPANY. THE MONTHLY CHARGE FOR THIS SERVICE WILL APPEAR ON YOUR MONTHLY BILL FROM YOUR LOCAL TELEPHONE COMPANY. CALLER ID MAY NOT BE AVAILABLE IN ALL AREAS AND SOME AREAS MAY OFFER NUMBER ONLY. THE FM112 WILL NOT OPERATE WITHOUT THREE(3)AA ALKALINE BATTERIES (NOT INCLUDED).

HELP LINE 1-800-366-0937

http://www.swbfreedomphone.com

FM112 Owner's Manual

Se Incluyen Instrucciones en Español